


Outside View



Inside View

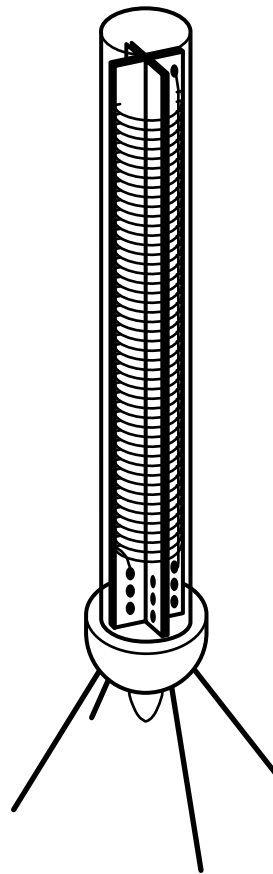


FIG. 5.17 Typical packaging for wire-wound platinum or rhodium-iron resistance thermometers used as standards, showing the outside copper canister and inside view of the wire-wound strain-free-mounting scheme (from Lake Shore Cryotronics 1995).